



INSTALLATION DETAILS - PRM1000

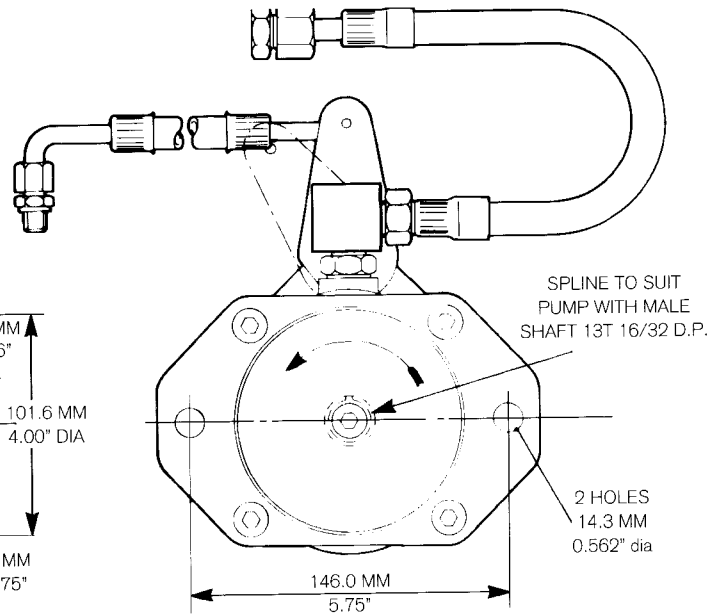

**NOTE: PTO SHAFT ROTATES SAME AS
ENGINE AT ENGINE SPEED.**

**IMPORTANT: WHEN GEARBOX FITTED WITH
ANGLE DRIVE, PTO SHAFT ROTATES
OPPOSITE TO ENGINE**

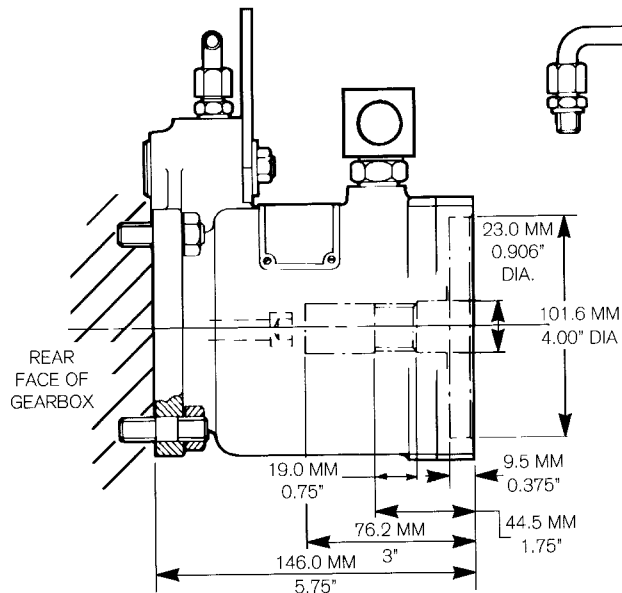